


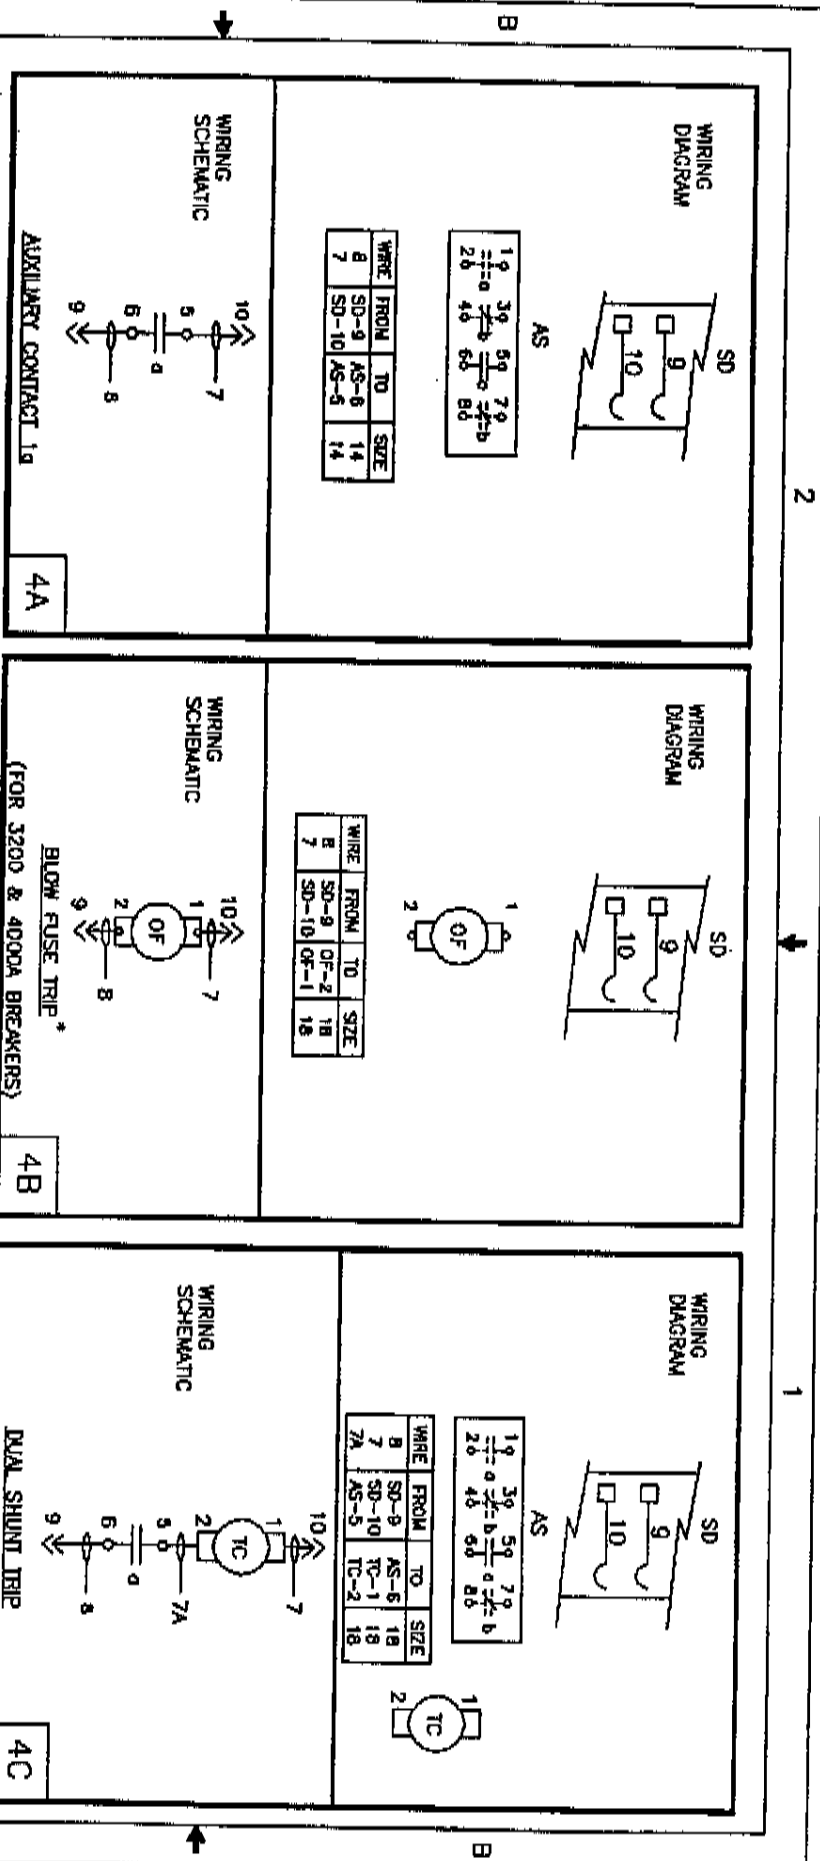

THIS FIGURE IS REQUIRED FOR 3200 AND 4000A FUSED BREAKERS

- DECELLIST**
 OFLO - OVERLOAD FUSE COIL
 TC - SHUNT TRIP COIL
 AS - AUXILIARY SWITCH ASSEMBLY
 SD - SECONDARY DISCONNECT
 a - AUXILIARY SWITCH CONTRACT
 OPEN WHEN BREAKER IS OPEN
 b - AUXILIARY SWITCH CONTACT
 CLOSED WHEN BREAKER IS OPEN

RECEIVED

53

* CAD GENERATED, DO NOT CHANGE MANUALLY
OF RETURN DISCREPANCY.

OF HUMAN DEVELOPMENT,
OF CHANGE AND CULTURE

MATERIALS. [4A], [4B], [4C].

TYPE	DATE	NAME

RL BREAKER WITH

ОТЪ ПУТЕМЪ, ИЛИ БАРНА

2


—

+ DEVICE LEADS

DEVICE LIST


CT1 - CURRENT SENSOR PHASE 1 (OR) A
 SD - SECONDARY DISCONNECT
 STD - STATO TRIP DEVICE
 TA - TRIP ACTUATOR

STATIC TRIP IF "SY" OR "YNC"
 NO GROUND FAULT OR WITH GROUND FAULT
 NO NEUTRAL METERING
 1 WINDING

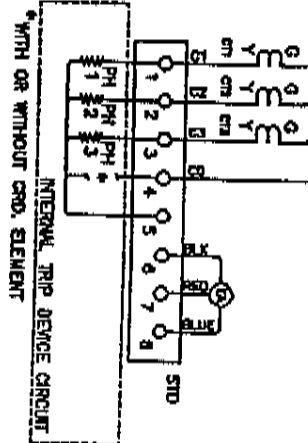

WIRE NO.	FROM	TO	WIRE
C1	CT1-Y	STD-1	1B
C2	CT2-Y	STD-2	1B
C3	CT3-Y	STD-3	1B
C4	CT1-G	STD-4	1B
C5	CT2-G	STD-5	1B
C6	CT3-G	STD-6	1B
TA1	RED	STD-7	1B
TA2	BLACK	STD-8	1B
TA3	BLUE	STD-9	1B

STATIC TRIP IF "YAN"
 NO GROUND FAULT
 WITH NEUTRAL METERING
 1 WINDING

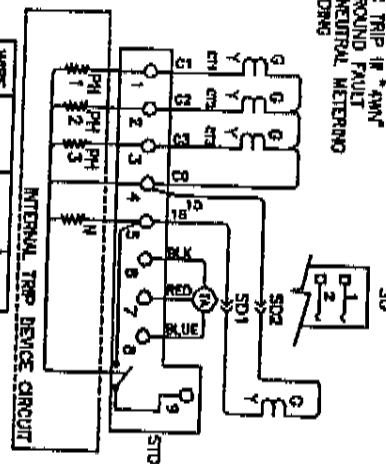

WIRE NO.	FROM	TO	WIRE
C1	CT1-Y	STD-1	1B
C2	CT2-Y	STD-2	1B
C3	CT3-Y	STD-3	1B
C4	CT1-G	STD-4	1B
C5	CT2-G	STD-5	1B
C6	CT3-G	STD-6	1B
TA1	RED	STD-7	1B
TA2	BLACK	STD-8	1B
TA3	BLUE	STD-9	1B

USED BY

EN

* CUD GENERATED, DO NOT CHANGE MANUALLY.

STANDARD DRAWING

NO NEW REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR

BY REVISIONS, CHANGE OR