



DESCRIPTION • INSTALLATION • MAINTENANCE

INSTRUCTIONS

TYPE MM MAGNETIC CONTACTORS

Frames 322, 422 Direct Current

Two Poles Normally-Open and Two Poles Normally-Closed

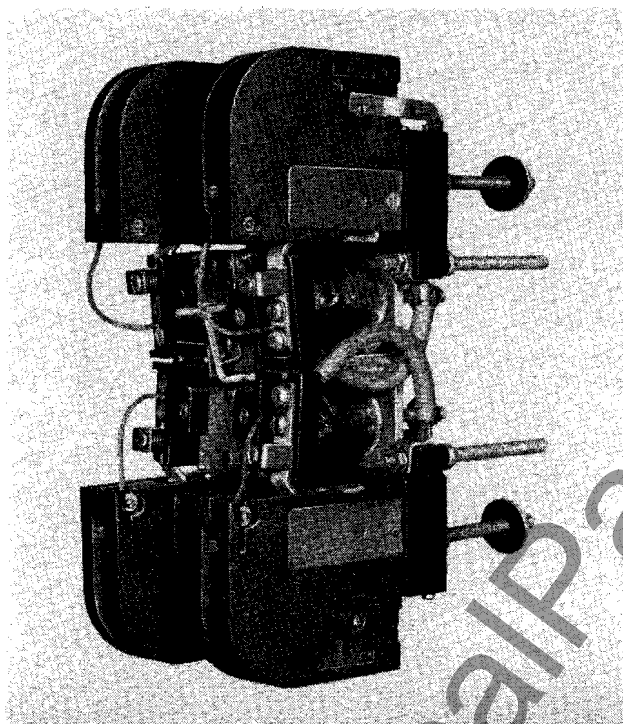


FIG. 1. Types MM-322, 422 Rear Connected Contactors

APPLICATION

TYPE MM CONTACTORS are general-purpose magnetically-operated contactors suitable for use in motor controllers and other switching applications.

Rating

TYPE	8 HR.	1 HR.	INTERRUPTING CAPACITY AT 800 V.
MM-322	100A	133A	1000A
MM-422	150A	200A	1000A

The operating coils are rated for continuous duty and will operate the contactors at 80% to 110% to their rated voltage.

The contactors are insulated for a maximum potential difference of 600 volts among parts.

CONSTRUCTION

The contactors are of unit construction with all

parts assembled on a common frame. The armature hinges on a knife-edge bearing which has an extremely long life and requires little maintenance.

The contactor is equipped with two operating coils, the upper coil being used to close the normally-open contacts, and the lower coil serving to produce a complete sealing of the normally-closed contacts. When neither operating coil is energized the kickout spring holds the lower, or normally-closed, contacts together. Because the kickout spring is not sufficiently strong to produce the full contact pressure, the lower coil should be energized at all times that the lower contacts are to be required to carry current.

Arc shields and blowout structures are provided on all four poles. Each arc shield is held in place by the blowout pole-pieces and a pair of spring clips, and may be removed by pulling it directly forward. An arc horn in the arc shield relieves the moving contact of excessive burning. The arc, which is drawn between the contacts as they separate, moves outward under the influence of the magnetic blowout field and transfers from the moving contact to the arc horn. A flexible connection which is provided to maintain the arc horn at the same potential as the moving contact serves also to prevent loss or misplacement of the arc shield when the latter is removed for inspection of the contacts.

The moving and stationary contacts are faced with solid silver. The moving contacts are hinged on their supports in such a way that sliding or rubbing of the surfaces when the contacts meet is practically non-existent, a provision essential to the long life of silver contacts.

Plates of non-magnetic steel are secured to the underside of the armature to insure against a sticking closed of the armature against either pole-face due to residual magnetism following the interruption of voltage to an operating coil.

Rear-connected contactors as indicated in Fig. 1, are held to the panel by ten mounting studs, eight of which make provision for the electrical connections. Front-connected contactors are provided with pressure type solderless terminals and are held to the panel by two mounting studs.

MAGNETIC CONTACTORS, TYPE MM

The contactors are suitable for mounting only on insulating panels up to 2 inches thick. Special insulating precautions must be taken if a contactor is to be mounted on a conducting surface.

ELECTRICAL INTERLOCKS

The Type L-46 normally-open electrical interlock and the Type L-47 normally-closed electrical interlock may be applied to the contactors in numbers limited according to Table No. 1.

Table No. 1. ELECTRICAL INTERLOCK

ELECTRICAL INTERLOCK TYPE	MAXIMUM ALLOWABLE NO. OF INTERLOCKS TO BE APPLIED TO A CONTACTOR
L-46 Normally open L-47 Normally closed	4 2
Total No. of interlocks of both types that can be applied to one contactor.	4

The stationary contact assembly of either type of interlocks is mounted on one of the molded bases of the contactor, occupying a position between the arc shields. The moving arm of the interlock is secured to the contactor armature by means of a single screw. Care should be taken when installing an interlock to make certain that its moving parts function freely and that the contact gaps and over-travels conform to the information given in the interlock Instruction Leaflets: I.L. 15-829-L46-1 and I.L. 15-829-L47-1.

The sequence in which the various switching operations occur as the contactor magnet closes is as follows: (1) the main normally-closed contacts open, (2) the main normally-open contacts close, (3) the Type L-46 normally-open interlock closes, and (4) the Type L-47 normally-closed interlock opens.

MECHANICAL INTERLOCK

A Type M-25 mechanical interlock (style # 1320 750) may be employed to safeguard a pair of contactors against the closing of one if the other is already closed. The contactors are mounted side-by-side on $6\frac{1}{4}$ inch centers.

INSTALLATION AND MAINTENANCE

Arc Shield. The arc shields and their arc horns, are essential to the performance of the contactor and these parts should always be in place. The flexible connections leading from the arc horns should always be securely fastened to the respective moving contacts. The arc shields may be removed

by pulling them directly forward, allowing the blow-out pole-pieces (which act as their fixed supports) to guide them in their sliding movement. In replacing the arc shields care must be taken that the guiding recesses in their sides locate themselves properly on and be gripped firmly by the supporting guides. If the guides are found to be spread apart so that they no longer grip the arc box firmly, remove the arc box and spring the guides together slightly by squeezing them with the fingers. The arc shields should be pushed back as far as they will go, until they are held securely against the molded base by the spring clip.

Armature and Bearing. The knife-edge bearing requires no maintenance other than the removal of accumulated dirt. Oil should not be used, as it hastens the collection of dust.

The upper magnet pole-face is secured to the core by means of a bolt having a head that projects forward into a hole in the armature. Care should be taken that the parts maintain proper alignment, and particularly that the bolt-head be accurately centered in the armature hole. Dirt should not be allowed to accumulate.

Operating Coil. When a new operating coil is installed, the identification label should be examined to make certain that the voltage rating and the coil style number are correct for the application.

This contactor has Class H coils which operate at a temperature rise of 150 degrees C. The surface temperature of the latter coils will be higher than that of Class A coils.

The steps to be followed in removing either of the operating coils are: (a) remove the arc shields, as described previously, (b) remove the two lower and one of the two upper moving contact assemblies from the armature by removing the single screw securing each in place, (c) loosen the two bolts securing the armature stop to the underside of the contactor frame until the armature stop can be lowered clear of the two dowel pins which locate it in position, (d) allow the self-contained assembly comprising the armature, armature stop, moving contacts and springs to hang by the shunt, (e) remove the screw holding the pole-face to the magnet core on which the coil is mounted, and (f) disconnect the leads and slide the coil forward until it is clear of the contactor.

Contacts. Oil or other lubricant should not be used on the silver contacts. The discoloration which results from arcing and from exposure to the atmosphere usually is not harmful to their performance, and consequently no filing or dressing is necessary.

When the contacts are new they should meet sufficiently in advance of the final sealing of the armature against either the upper or the lower pole face, that a gap of approximately $\frac{5}{32}$ inch appears between the underside of each moving contact and the edge of its support, as indicated in Fig. 2. As the contacts wear, the amount of this overtravel diminishes, and when at length it decreases to $\frac{1}{32}$ inch, the contacts should be replaced.

A moving contact can be removed for replacement by first disconnecting its shunts and then removing its contact spring. Each of the stationary contacts is slotted to facilitate removal, and it is necessary only to loosen the screw until the dowel projecting from the back of the contact is free of the locating hole in the stationary contact support.

When the contacts are new, the open gap of the normally-open contacts, with the armature sealed against the lower pole-face, should be $\frac{9}{32}$ to $\frac{11}{32}$ inch. The open gap of the normally-closed contacts, when the armature is sealed against the upper pole-face, should be $\frac{1}{4}$ to $\frac{5}{16}$ inch, as shown in Fig. 2.

If after applying new contacts it is found that the overtravels and contact gaps do not conform to the dimensions given, it may be necessary to bend the moving contact straps slightly.

The contact pressures of both the normally-open and normally-closed contacts, when they are new should be as indicated in Table No. 2.

Table No. 2. CONTACT PRESSURES

CONTACTOR TYPE	CONTACT PRESSURE IN OUNCES	
	Initial	Final
MM 322 MM 422	9-12	22-26

To measure the final pressure of one of the contacts, first close the contactor mechanically in a direction producing full closing of the contact. Then by means of a spring scale hooked to a loop of fine wire measure the force necessary to separate the moving from the stationary contact.

If, after new contacts are installed, the pressures are not correct, it may be necessary to replace the contact springs or to adjust the contact overtravels in the manner described previously.

Failure of the magnet to operate the contactor may result from an open-circuited operating coil, from a circuit condition in which the voltage is

excessively low, or from the presence of friction between the parts. Failure of the contactor to open may be caused by friction or by a defective kickout spring.

OPERATING COILS

The more commonly used operating coils are listed in Table No. 3.

Table No. 3. OPERATING COILS

COILS VOLTS	TYPES MM 322, 422 CONTACTOR COILS	
	Upper Coil Style No.	Lower Coil Style No.
115	1419 640	1622 906
230	1419 641	1622 907
550	1622 924	1622 908

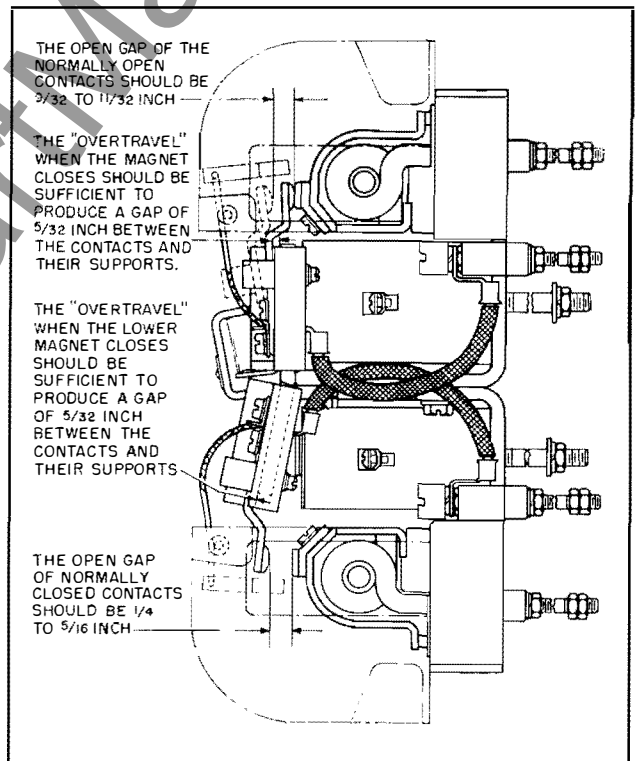


FIG. 2. Partially Cutaway View of Types MM-322, 422 Contactors

RENEWAL PARTS

Renewal parts may be obtained from the nearest Westinghouse Sales Office. Be sure to describe the part or parts required and give complete nameplate reading on the contactor for positive identification.



WESTINGHOUSE ELECTRIC CORPORATION
BUFFALO PLANT • MOTOR AND CONTROL DIVISION • BUFFALO 5, N. Y.

Printed in U.S.A.

www.ElectricalPartManuals.com

