



ADDENDUM TO INSTRUCTION MANUAL GEK-106211 FOR DAR2000 RELAYS

On page 36, where the different modes of operation of the recloser are defined, the following correction must be observed:

For JUMPER J5, IN and OUT positions are interchanged.

The correct explanation is as follows:

Reclose Initiation only by circuit breaker status (J5) IN / OUT

IN position: set J5 in this position if a protection trip and / or the circuit breaker status can initiate the recloser.

OUT position: set J5 in this position when only reclose initiations are desired if caused by the circuit breaker status.